



Smith & Wesson*



M&P[®]9 M2.0^{*}



CO₂



VELOCITÉ



HOP-UP RÉGLABLE



PRESSION DES GAZ
VERS L'ARRIÈRE



COUPS



6 mm

READ THIS OWNER'S MANUAL COMPLETELY. This airsoft gun is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

⚠ WARNING

NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYE. EYE AND FACE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE. READ THIS OWNER'S MANUAL BEFORE USING. MAY BE DANGEROUS UP TO 220 YARDS (200 METERS).

Buyer should be at least 18 years of age to purchase this airsoft gun. Read all instructions before using. The purchaser and user should conform to all laws governing the purchase, use and ownership of airsoft guns. Read the enclosed owner's manual carefully before loading or using the airsoft gun. Eye protection required.

<https://www.talanzhanshu.com>



SAFETY INSTRUCTIONS



DESCRIPTION



OPERATION



CARE





SAFETY INSTRUCTIONS

EN

⚠ WARNING This airsoft gun can cause serious injury or death. Read and follow the owner's manual carefully. Do not load a projectile into the airsoft gun until you are ready to shoot. If you do load a projectile and then decide not to shoot, remove it either manually or by shooting the airsoft gun at a safe target. An unloaded airsoft gun which is "ON SAFE" is safest. Accidents happen fast, please handle the airsoft gun safely.

Airsoft guns differ in their operation and you are never ready to fire any gun until you are thoroughly familiar with it. Read the following owner's manual thoroughly prior to operating.

These symbols and safety signal words, , , **NOTICE**, mark warnings, cautions, and notices in this owner's manual. Carefully follow them for your own safety and the safety of others.

⚠ WARNING Failure to follow the instructions and recommendations in this owner's manual may result in bodily injury including face, eye, and ear injury, blindness, deafness or death.



**EYE PROTECTION
REQUIRED
WEAR YOUR
SHOOTING GLASSES**

Operating Procedures

1. Reviewing Safety
2. Learning the Parts of Your Airsoft Gun
3. Operating the Safety
4. Installing and Removing CO₂
5. Handling and Storage of CO₂
6. Loading and Unloading Projectiles
7. Installing the Backstraps
8. Aiming and Firing Safely
9. Adjustable Hop Up
10. Maintaining Your Airsoft Gun
11. Trouble Shooting
12. Repair / Service / Warranty



SAFETY INSTRUCTIONS

EN

1. Reviewing Safety

- You and others with you **MUST** wear shooting glasses to protect your eyes. If you wear reading glasses the lenses must be certified for impact resistance or you should wear safety glasses intended for use over normal optical reading glasses.
- You and others with you should always wear eye and face protection designed for airsoft guns.
- Always aim in a **SAFE DIRECTION**. Always keep the muzzle of the airsoft gun pointed in a **SAFE DIRECTION**. A **SAFE DIRECTION** is defined as always pointing the airsoft gun and/or the muzzle of the airsoft gun in a direction, in which if it were to discharge, it would not cause any injury or damage. Controlling where the muzzle or front of the barrel is pointed at all times is very important.
- Always keep your finger off the trigger and out of the trigger guard until ready to shoot.
- Never point the airsoft gun at anything you do not intend to shoot.
- Always treat the airsoft gun as though it is loaded and with the same respect you would a firearm.
- Never look down the barrel of an airsoft gun.
- Always keep the airsoft gun "ON SAFE" until you are ready to shoot.
- Always check to see if the airsoft gun is "ON SAFE" and unloaded when getting it from another person or from storage.
- Use .24 caliber (6 mm) plastic BBs only.
- Never reuse ammunition.
- Do not shoot at hard surfaces or at the surface of water. The BB may bounce off or ricochet and hit someone or something you had not intended to hit.
- Do not shoot at fragile objects such as windows.
- Place the backstop in a location that will be safe should the backstop fail.
- Your backstop should be checked for wear before and after each use. All backstops are subject to wear and will eventually fail. Replace your backstop if the surface is worn or damaged or if a ricochet occurs.
- Do not attempt to disassemble or tamper with your airsoft gun. Unauthorized repairs or modifying the function of your airsoft gun in any way may be unsafe and will void your warranty.
- Before you store your airsoft gun, make sure it is unloaded, the power source is removed, and is "ON SAFE."
- Always store your airsoft gun in a secure location away from unauthorized users and separate from ammunition.

⚠ WARNING Do not brandish or display this airsoft gun in public – it may confuse people and may be a crime. Police and others may think it is a firearm. This could cause aggressive action that could lead to your death. Do not change the coloration and markings to make it look more like a firearm.



2. Learning the Parts of Your Airsoft Gun





⚠ WARNING Be sure the airsoft gun is always pointed in a safe direction. Never point the airsoft gun at any pet or person even if it is unloaded. Always assume and handle the airsoft gun as if it were loaded and ready to fire.

3. Operating the Safety

⚠ CAUTION

Like all mechanical devices, an airsoft gun safety can fail. Even when the safety is "ON SAFE", you should continue to handle the airsoft gun safely. Never point the airsoft gun at anything you do not intend to shoot.



⚠ CAUTION

Never load the magazine until you have verified the airsoft gun will discharge CO₂ properly. (See **Section 4**. Installing and Removing CO₂)

⚠ WARNING Use only 12g CO₂ capsules. Any attempt to use other types of gas capsules could be extremely dangerous and could result in serious injury or death. Gases other than CO₂ could result in an explosion or rupture of the airsoft gun.

⚠ CAUTION

Keep hands and face away from escaping CO₂ gas. It can cause frostbite if allowed to come in contact with skin. Always make sure the CO₂ capsule is empty before attempting to remove it from the airsoft gun by slowly turning the gas capsule puncture screw counter-clockwise all the way until you no longer hear the escape of CO₂ gas.



4. Installing and Removing CO₂

NOTE: A slight seepage of CO₂ may occur until piercing screw is tight.

NOTICE Never try to force any CO₂ capsule into or out of place. Do not store your airsoft gun with a CO₂ capsule in it. If you know you will not be using your airsoft gun for an extended period of time, empty the CO₂ capsule and remove it from the airsoft gun. (See **REMOVING A CO₂ CAPSULE**). This is very important to remember, as it will prolong the longevity of your airsoft gun seals.

INSTALLING A CO₂ CAPSULE



NOTICE If the airsoft gun does not make a popping noise after pulling the trigger, the CO₂ is not being discharged. Turn capsule piercing screw clockwise until you hear the CO₂ capsule being pierced.

REMOVING A CO₂ CAPSULE

1. Point the airsoft gun in a SAFE DIRECTION, and press the magazine release.
2. Remove the magazine.
3. Open piercing screw using Allen key.
4. Turn the piercing screw on the bottom of the grip counterclockwise, until you hear gas start to escape, being careful not to come in contact with the escaping gas. Allow all the gas to escape.
5. Remove the CO₂ capsule.

⚠ WARNING CO₂ capsules may explode at temperatures above 122° F. Do not mutilate or incinerate them. Do not expose them to heat or store CO₂ capsules at temperatures above 122° F.

**⚠ CAUTION**

Never attempt to reuse a CO₂ capsule for any purpose.

Always check to make sure the airsoft gun is unloaded when getting from storage or from another person.

5. Use and Handling of CO₂ Capsules

It is possible that certain conditions may affect a CO₂ capsule, which can impact its proper performance. These conditions include the usage, maintenance and storage at temperatures that are higher or lower than normal outdoors temperatures (60°-80° F/16°-27° C). Another condition may be when the airsoft gun is fired rapidly.

1. High temperatures can increase pressure in the CO₂ capsule and also within the airsoft gun, leading to higher than standard operating pressure. This excess pressure could cause the airsoft gun to malfunction or be permanently damaged. Maximum storage or operation temperature should never exceed 122° F (50° C). This temperature can be reached if you leave the airsoft gun under direct sunlight on a bright day. Thus, to ensure proper airsoft gun operation, do not expose it to high temperatures or direct sunlight for long periods of time. Otherwise, the CO₂ capsule could overheat and explode, which could damage the airsoft gun and cause injuries or death to people around it.
2. Fast consecutive shooting may produce a decrease of temperature in the airsoft gun, as well as the CO₂ capsule. This could result in lower projectile velocities and may even lower gas pressure enough so that the pistol will not fire. This condition can be especially apparent when shooting in cold weather and can be avoided by allowing more time between shots. This permits the gas to increase in temperature and pressure and produce normal velocities.
3. During rapid fire, the muzzle velocity of each shot will diminish. This can affect shooting accuracy and you will get fewer shots per CO₂ capsule.
4. Care should be exercised to ensure that the airsoft gun is not shot with a CO₂ capsule that is low in pressure. Here are some indicators of insufficient pressure:
 - A) The sound of the shot is not as loud as when the capsule is full.
 - B) The projectile hits the target, but in a lower position than it would with a full CO₂ capsule (that is, the shooting speed has dropped).



6. Loading and Unloading Projectiles

⚠ WARNING Use .24 caliber (6 mm) plastic BBs only in this airsoft gun. Use of any other ammunition can cause injury to you or damage to the airsoft gun.



⚠ CAUTION



Only use flawless BBs: Never use the following BBs:

① diameter larger than 6 mm, ② with edges, ③ both halves not aligned, ④ used, soiled.

Warranty expires if non-recommended BBs are used.

It's recommended to use precision BBs from Umarex USA / Elite Force.

To ensure proper operation of the magazine, protect it from dirt and dust.

⚠ CAUTION

Never assume that because the airsoft gun no longer fires a projectile and/or the magazine is removed from the grip frame that a projectile is not lodged in the barrel. Always treat the airsoft gun as though it is loaded and with the same respect you would a firearm.

You and others with you should always wear shooting glasses to protect your eyes. Always make sure that the muzzle points in a safe direction.



OPERATION

EN

Removing a Jammed BB

- Make sure the airsoft gun is pointed in a **SAFE DIRECTION**.
- Remove the magazine by pressing down on the magazine release button.
- Insert a 6 mm (.24 caliber) ramrod into the muzzle end of the barrel and carefully push the jammed BB into the breech. The barrel could be damaged and the warranty will be void if the proper sized ramrod is not used.
- Hold the airsoft gun upright and shake until the jammed BB falls out.
- If you are not able to unjam your airsoft gun by following this procedure, take no further action. Call Umarex USA (479) 646-4210 and ask for the service department.

CAUTION

 
Your backstop should be inspected for wear before and after each use. Discontinue use if the backstop surface shows signs of failure. Always place the backstop in a location that will be safe should the backstop fail. Discontinue the use of a backstop if the projectile rebounds or ricochets.

NOTE: Many factors affect airsoft gun performance and velocity, including brand of projectile, lubrication, barrel condition and temperature.

WARNING

You and others with you should always wear shooting glasses to protect your eyes.

7. Installing the Backstops

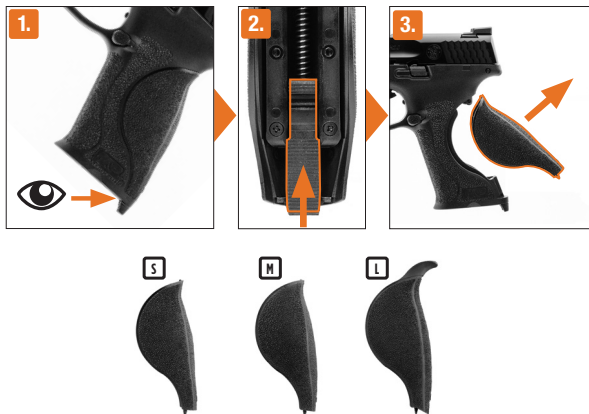



8. Aiming and Firing Safely

⚠ CAUTION

 
Do not shoot at hard surfaces or the surface of water. Projectiles may bounce off or ricochet and hit someone or something you had not intended to hit. Do not shoot at fragile surfaces such as glass or mirrors.

⚠ CAUTION

The slide blows back, meaning it shifts rearward. Keep hands and fingers away from pinch points.




- Always aim your airsoft gun in a **SAFE DIRECTION**. When you are sure of your target and backstop, and the area around the target is clear, squeeze the trigger to fire.
- Always choose your target carefully. Only targets which cannot be completely penetrated or which will not cause ricochets should be used.
- Your backstop should be checked for wear before and after each use. Replace your backstop if the surface is worn or damaged, or if a ricochet occurs.
- The airsoft gun is correctly aimed when the front sight blade is positioned exactly in the notch and even with the rear sight. The top of the front sight blade should be even with the top of the notch in the rear sight. The bullseye should appear to rest on the top of the front sight.



NOTICE When all the BBs have been fired, the slide will stay in the rear position. Press the slide stop lever to let the slide jump forward.



 
9. Adjustable Hop Up

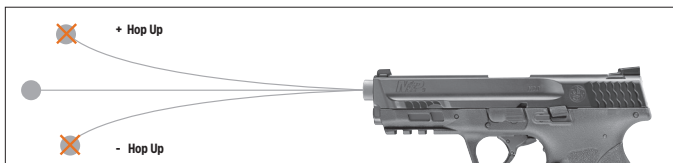

CAUTION

Always check to make sure the airsoft gun is unloaded when getting from storage or from another person.

 WARNING An airsoft gun that is not operating properly may be dangerous. It should be kept safely from use by anyone until repaired or destroyed. Do not try to take the airsoft gun apart. It is difficult to reassemble and improper disassembly or reassembly can cause serious injury or death.

CAUTION

 
Before any care, cleaning or maintenance, always be sure your airsoft gun is unloaded. Keep pointed in a safe direction. It is important to perform routine inspections and maintain your airsoft gun properly.



10. Maintaining Your Airsoft Gun

With care and routine inspections your airsoft gun will provide many sessions of shooting enjoyment. Abuse, neglect and continued exposure to the elements will impair the performance of any airsoft gun. To ensure continued proper function, apply 1 to 2 drops of Elite Force Slick silicone oil onto all moving parts such as the BB Follower, gas valve and the trigger hinge (1000 shots).

NOTICE Oils that contain acid or resin can damage seals and possibly the finish of the airsoft gun. Do not force the rod into the barrel, as this could cause damage. Never drip silicone oil directly into the barrel.

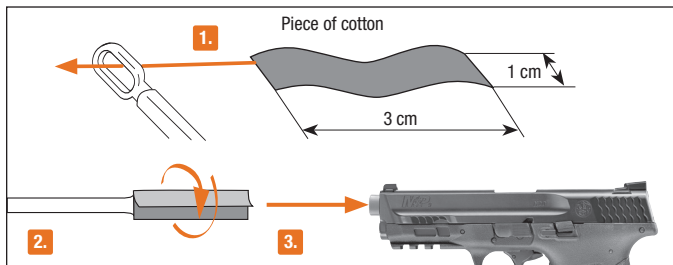


Prepare a thin rod with a length of approx. 30 cm. Attach a piece of cotton fabric to its end and clean the barrel with some silicone oil.

Occasionally clean the metal parts on the outside. Use a cloth which has been slightly dampened with Elite Force Slick Silicone oil.



11. Trouble Shooting

	POSSIBLE CAUSES					
	CO ₂ / Magazine empty	Dirty barrel	Extreme temperatures	Wrong ammunition	Ammunition loaded incorrectly	Sight not properly adjusted
 PROBLEMS						
Does not shoot straight	●	●	●	●	●	●
Airsoft gun does not shoot	●		●	●	●	
Low shooting velocity	●	●	●	●	●	

12. Repair / Service / Warranty

Do not return defective or damaged product to the dealer. If your airsoft gun needs repair, call Umarex USA (479) 646-4210 and ask for the Service Department or visit www.umarexusa.com. DO NOT ATTEMPT TO DISASSEMBLE IT! Your airsoft gun requires special tools and fixtures to repair it. Any disassembly or modification not performed by Umarex USA will void the warranty.

CAUTION

The components of this airsoft gun were engineered and manufactured to deliver optimum performance. Any modification or tampering with an airsoft gun may cause a malfunction, void your warranty and may make it unsafe to use. Any change in performance (such as a lowered trigger pull force and shortened trigger travel) indicates possible modification, tampering and/or wear. Such airsoft gun should be inspected, replaced, or properly repaired by only qualified Umarex USA personnel. Any airsoft gun that has been dropped should be checked by qualified personnel to ensure that its function has not been affected.

**30 DAY LIMITED WARRANTY**

This product is warranted to the retail consumer for 30 days from the date of purchase against defects in material and workmanship and is not transferable.

WHAT IS COVERED: Replacement parts and labor.

WHAT IS NOT COVERED: Shipping charges to Umarex USA for defective product and damages caused by abuse or failure to perform normal maintenance as well as any other expense. Consequential damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY CLAIMS: Warranty Claims and Repair for U.S. and Canadian customers only. Call Umarex USA (479) 646-4210 and ask for the Service Department. If it is determined a return is necessary, you will be issued a Return Authorization Number. Write this number boldly on the box and return the product prepaid to Umarex USA (Canadian customers will be provided with the address of an authorized Canadian Repair Facility). Your name, address, phone number and a note explaining the defect found must be included in the package. A copy of the original dated cash register receipt must accompany the return. U.S. customers, include a check made to Umarex USA in the amount provided by Umarex USA's service department to cover shipping and handling.

IMPLIED WARRANTIES: Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to 30 days from date of retail purchase. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. TO THE EXTENT ANY PROVISION OF THIS WARRANTY IS PROHIBITED BY FEDERAL, STATE, OR MUNICIPAL LAW; WHICH CANNOT BE PREEMPTED, IT SHALL NOT BE APPLICABLE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

WARRANTY VIOLATIONS:

THE FOLLOWING WILL VOID YOUR WARRANTY

- Physical abuse
- Use of poor quality BBs (including .12g BBs)
- Disassembly
- Internal upgrades